

吸尘器

使用说明书

VACUUM CLEANER
INSTRUCTIONS MANUAL

U1

TEL 400-8899-315

江苏美的清洁电器股份有限公司

地址：苏州市相城经济开发区漕湖大道39号

编码：215000

网址：www.midea.com

版本号：U110-06-R2.0

执行标准：GB4706.7-2014 / GB4706.1-2005 / GB4343.1-2009 / GB17625.1-2012

Jiangsu Midea Cleaning Appliance Co.,Ltd

Address : No.39 Caohu Avenue, Xiangcheng Economic Development Zone, Suzhou

Post : 215000

www.midea.com

Version No. :U110-06-R2.0

Executive standard :GB4706.7-2014 / GB4706.1-2005 / GB4343.1-2009 / GB17625.1-2012



 
微信扫一扫，服务立马到

使用产品前请仔细阅读本说明书，并请妥善保管
Please keep this instruction Manual carefully,
and read it before operating

目录 Contents

产品介绍	Product Introduction	2
使用说明	Product Operation	4
维护保养	Product Maintenance	6
异常处理	Trouble Shooting	8
安全说明	Safety Introduction	10
保修须知	Warranty Information	12

产品介绍 Product Introduction

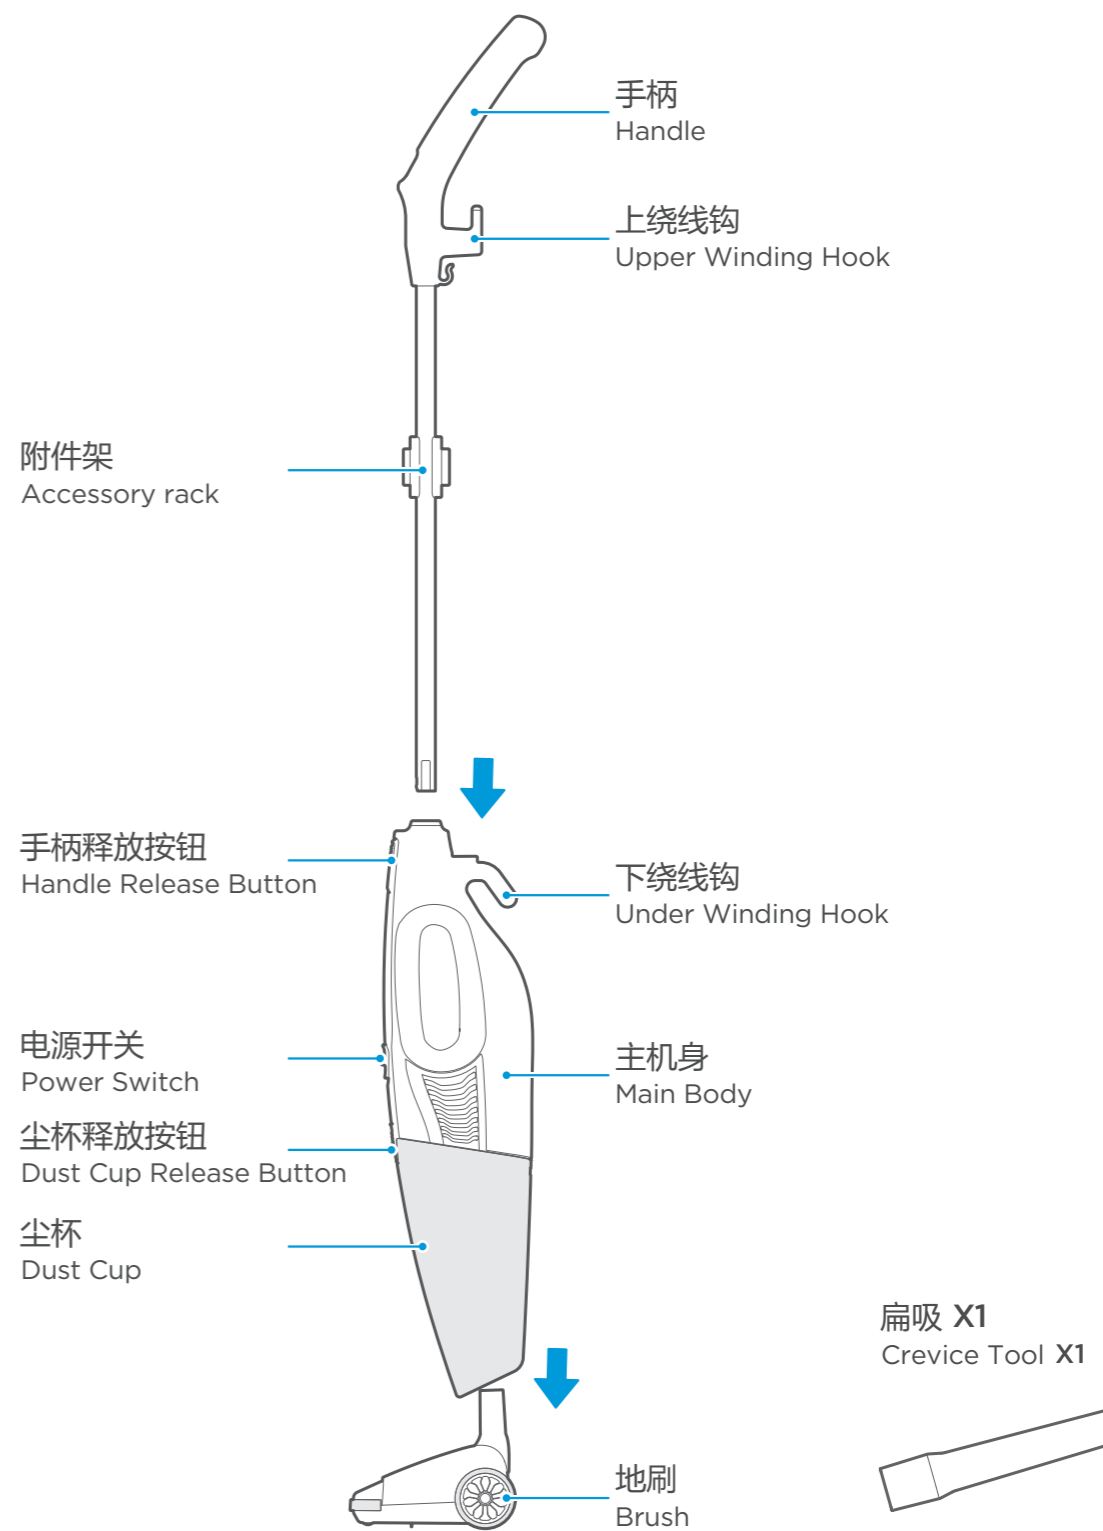

使用说明 Product Operation

其他附件说明

 
Other accessories

配件使用：扁吸

Use of accessories: Crevice tool

- 1 适用于吸家具缝隙，角落，天花板等小缝隙处的灰尘及毛条。

It is used for cleaning little crevice and corner of furniture or platfond.




产品使用

Product Operation

- 1 电源开关: 电源开关有两个不同位置，按“I”端开启吸尘器，按“O”端关闭吸尘器。

 The power switch has two different positions, Press "I" to start the vacuum cleaner, Press "O" to close the vacuum cleaner.

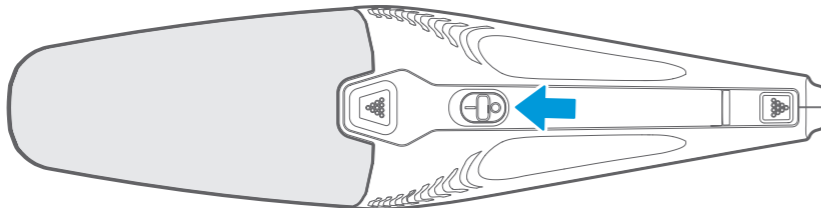

- 2 产品操作: 垂直使用本产品: 释放电源线，插入220V插座中，将手柄杆插入主机，选择正确的附件（扁吸或者地刷）并且将其和主机吸入口连接；

Product Operation : Use this product vertically: Release the power cord and insert into the 220V socket; Insert the handle lever into the main body. Select the correct attachment (crevice tool or brush) and connect it to the suction of main body.

 
注意 Caution

手持使用本产品：按下手柄释放按钮并且将手柄杆从主机上取下；根据清扫需要选择扁吸或者附件刷插入吸口。

Press the release button of the handle and remove the lever from the main body; Select crevice tool or brush to insert the suction nozzle according to the cleaning requirement.

- 3 缠绕和释放电源线: 本吸尘器带有上、下绕线钩，可用来缠绕电源线，方便收纳。要释放电源线时，只要顺时针或逆时针旋转上绕线钩即可快速释放电源线。

Wind and release the power cord: The vacuum cleaner has upper and under winding hooks, which can be used to wind the power cord for easy storage. To release the power cord, the power cord can be released quickly as long as it is rotated clockwise or counterclockwise.

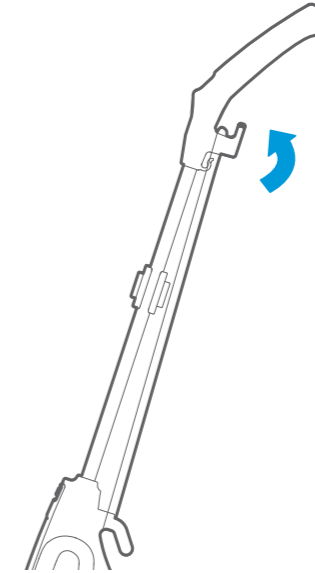

注意 Caution

整机运行时有气流高速流动声属于正常现象。

It is normal phenomenon that has the voice of high speed airflow while the product running.

 
维护保养 Product Maintenance

尘杯清洁

Dust cup cleaning

- 1 卸下尘杯：按住尘杯释放按钮，从机身上取出尘杯。

Remove the dust cup: Hold the dust cup release button and remove the dust cup from the main body.

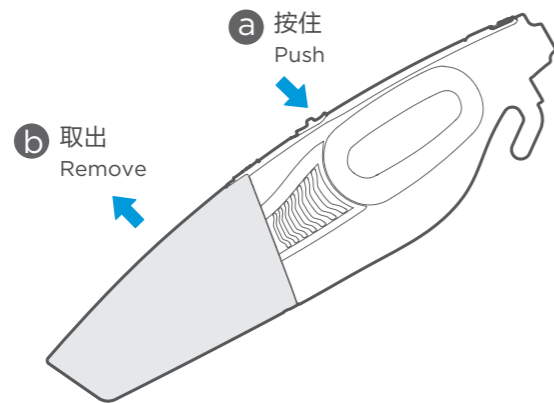

- 2 倾倒垃圾：取出过滤器，再倾倒垃圾。请靠近垃圾桶，确保灰尘不会洒出。

Dump the garbage: Remove the filter, Please close to the trash can to make sure the dust is not spilled.

 
- a
取出过滤器
Remove the filter

- b
倾倒垃圾
Dump the garbage



- 3 清空尘杯中的灰尘后，若过滤器堵塞严重时可在冷水中冲洗过滤器，晾晒24小时后安装到尘杯里面。

Clean the dust in the dust cup, If the filter is blocked seriously, the filter can be washed in the cold water, and it will be installed in the dust cup after 24 hours.

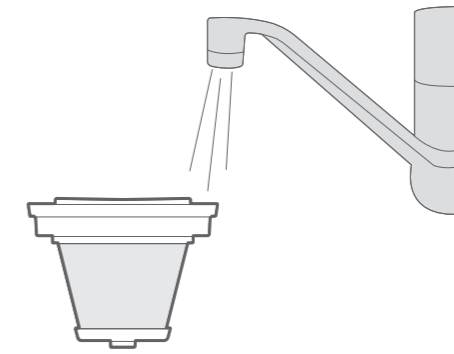

提示 Tips

提示：为了达到最好效果，请每次使用完毕后清空尘杯，清理尘杯过滤器。尘杯是可以用水洗的，为保证产品达到最佳效果，请每隔3个月更换一次过滤器（可视实际使用情况而定）。

Tips: For best results, clean the dust cup and clean the dust cup filter after each use. The dust cup can be washed with water, so as to ensure the best effect of the product, please change the filter every 3 months (depending on the actual usage).

各过滤部件清洗后必须干燥后方可装回使用，建议阳光下晒24小时确保彻底干燥后在使用；必须确保各部件安装到位，否则会引起产品故障；不可将水渗入吸尘器电器元件内，否则可能会引起产品故障。

After cleaning the filter parts, they must be dried before they can be put back into use. They are recommended to be exposed to the sun for 24 hours to ensure that they are thoroughly dried and then used. Must ensure that all parts are installed in place, otherwise the product will fail; Do not leak water into the vacuum cleaner components, or it may cause product failure.

注意 Caution

1. 请勿使用洗衣机清洗尘杯过滤器；
2. 请勿使用吹风机干燥过滤器，需自然晾干；
3. 各部件需完全干透后方可装机使用；
4. 小心替换尘杯内的过滤器；
5. 没有安装过滤器时禁止使用吸尘器；
6. 请小心更换尘杯。

1. Do not use the washing machine to clean the dust cup filter.
2. Please do not use the dryer to dry the filter.
3. The filter parts can be put back for use only after being cleaned and dried.
4. Be careful to replace the filter in the dust cup.
5. Do not use the vacuum cleaner when installing the filter.
6. Please carefully replace the dust cup.

异常处理

本品在使用时如发现异常，请先查阅下表。

异常情况	可能原因	处理方法
吸尘器完全不工作	电源插头未在插座上插牢 电源插座没有电 吸尘器开关没有打开 电机热保护器动作	重新插入插头 检查断路器 按下机器的电源开关 拔掉插头，等待热保护器恢复
吸力减弱	过滤器破裂 过滤器未安装到位	更换过滤器 重新安装过滤器

其他无法处理的故障，请联系当地售后服务网点或拨打全国服务热线：400 8899 315

TROUBLESHOOTING

In case of mis-function, please refer to the following table.

Problem	Possible causes	Solution
The vacuum cleaner does not work	- The power plug is not properly plugged into the socket - No electricity on the power socket - The vacuum cleaner switch is not turned off - Motor thermal protector acts	- Reinsert the plug - Check the circuit breaker - Press the machine's power switch - Unplug the plug and wait for the thermal protector to recover
Suction becomes weaker	- Filter break - The filter is not in place	- Change filter - Reinstall the filter

For other failures, please contact the local service outlet or call the service hotline : 400 8899 315

中国RoHS



零部件名称	中国RoHS管控物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
电子电路	×	○	○	○	○	○
开关	○	○	○	○	○	○
电源线	×	○	○	○	○	○
电机组件	○	○	○	○	○	○
电机罩组件	○	○	○	○	○	○
金属伸缩管	○	○	○	○	○	○
软管组件	○	○	○	○	○	○
附件组件	○	○	○	○	○	○
出风板组件	○	○	○	○	○	○
尘杯组件	○	○	○	○	○	○
中框组件	○	○	○	○	○	○
机体组件	○	○	○	○	○	○
过滤组件	○	○	○	○	○	○

备注：

1. 本表格依据SJ/T 11364的规定编制。
2. ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
3. ×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。
4. 本表中的有×的所有部件均符合欧盟的RoHS指令，即“欧洲议会和理事会关于在电子电气设备中限制使用某些有害物质的第2011/65/EU号指令”及其修正案。

CHINA ROHS



Component name	China's RoHS control substances or elements					
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBBs)	(PBDEs)
Electronic circuit	×	○	○	○	○	○
Switch	○	○	○	○	○	○
Power cord	×	○	○	○	○	○
Motor assembly	○	○	○	○	○	○
Motor cover assembly	○	○	○	○	○	○
Metal extension tube	○	○	○	○	○	○
Hose assembly	○	○	○	○	○	○
Accessory assembly	○	○	○	○	○	○
Air-out board assembly	○	○	○	○	○	○
Dust cup assembly	○	○	○	○	○	○
Mullion assembly	○	○	○	○	○	○
Body assembly	○	○	○	○	○	○
Filter assembly	○	○	○	○	○	○

Remarks:

1. This table is formulated according to SJ/T 11364.
2. ○: The content of the harmful substance in all homogeneous materials of the component is below the limit prescribed in GB/T 26572.
3. X: The content of the harmful substance in all homogeneous materials of the component is above the limit prescribed in GB/T 26572.
4. All parts marked with X in this table comply with EU RoHS directive, i.e. "Directive 2011/65/EU Restriction of the Use of Certain Hazardous Substances in Electronic and Electrical Equipment" and the amendments.

安全说明



- 请勿将吸尘器接近热源，辐射或者燃烧的烟头，严禁吸入下列物体：
 1. 水及溶剂等一切液体。
 2. 石灰、水泥灰等建筑粉尘及垃圾。
 3. 发热物体，如未熄灭碳头、烟头。
 4. 锐利碎片，如玻璃等。
 5. 易燃易爆物品，如汽油或酒精制品。
- 切勿让小孩玩弄、操作吸尘器，以免发生意外；
- 您的吸尘器是一台电动器具：它必须按照正常使用条件进行使用，切莫让吸尘器在无人看管情况下独自运转；
- 清洁、维修或暂时不用吸尘器时，必须切断电源；
- 切断电源：不可拉电源线，应用手握住插头塑料部位拔下插头；
- 检查确认供电电压必须与吸尘器充电电压一致；
- 不要让它穿越锋利的物品，以免损坏电源线；
- 切忌将吸尘器浸入水中，避免接近发热器具或暴晒，以免发生火灾；
- 切勿拖拉电源线来移动充电座；
- 下列情形时，请不要使用吸尘器，并及时送至本公司指定的维修部检修
 1. 发生跌落并出现明显损坏或运转不正常；
 2. 电源线破损；
- 避免在吸入口堵住的状态下长时间运行，以免电机损坏及吸尘器发热变形。
- 搬运过程中不得按尘杯按钮，以防机器脱落轧伤。

SAFETY INSTRUCTIONS



- Do not place the appliance close to heat sources, radiation, or burning cigarette.
Do not use the appliance to remove the following objects:
 - (1) All liquids such as water and solvents.
 - (2) Lime, cement, ash and other construction dust and garbage.
 - (3) Hot objects, such as cigarette butts.
 - (4) Sharp objects, such as glass shards, etc.
 - (5) Inflammable and explosive articles, such as gasoline or alcohol products.
- Do not let children play with or operate the appliance to prevent accidents.
- Your appliance is an electric appliance: It must be used appropriately.
Do not leave the operating appliance unattended.
- The power must be turned off during cleaning, maintenance or when in storage.
- Do not pull the power plug to turn off the appliance.
Hold the plastic part of the plug to remove it from the power socket.
- The power supply voltage must correspond to that of the appliance charging voltage.
- Keep the power cord away from sharp objects to prevent it from being damaged.
- To prevent fires do not immerse the appliance in water, do not expose it to any heating appliances.
- Do not drag the power cord when moving the docking station.
- In the case of below situations do not use the appliance and send it immediately to the nearest approved maintenance facility :
 - (1) The appliance fell and consequently damaged
 - (2) The power cord is damaged
- Stop operating the appliance if the suction inlet is blocked to prevent damages (such as overheating) to the motor or deformations to the vacuum plastic parts occasioned by overheating motor.
- Do not press the dust cup button during handling to prevent the machine from falling off.

保修须知

美的真空吸尘器严格遵照国家“新三包”规定进行保修服务。
用户在正常使用产品的情况下，提供相关免费维修服务。

- 家庭整机保修两年，电机保修三年，充电产品的充电器、电池保修半年；
- 非家庭整机及其主要部件保修半年；如：经营、商用、公司集体的产品。
- 保修期内用户可享受免费上门维修（特殊地区除外）服务；“免费上门维修”限桶吸产品。
- 保修期界定：
 1. 以有效保修凭证的开具日期作为保修期的起始日期；
 2. 没有有效保修凭证的，按出厂日期后6个月作为保修期的起始日期；
 3. 若既无有效保修凭证也无出厂日期的，则按该产品的最早上市日期后6个月作为保修期的起始日期；
 4. 网购产品15天界定期以收货日期计算，后期保修可按发票日期计算。
- 保修期内维修更换的零部件归本公司所有，保修期外维修更换的零部件归用户所有；
- 其他事项按照国家“新三包”规定执行；
- 凡属下述情况之一的，不在保修范围内：
 1. 用户搬运、使用、维护、保管不当而损坏的；
 2. 使用充电电压低于187 V 或者高于240 V 而损坏的；
 3. 未按产品使用说明书要求使用、维护、保养而造成损坏的；
 4. 非本公司专业服务人员拆卸、维修的；
 5. 因不可抗力（如雷电、火灾、地震、水灾等自然灾害）造成损坏的；
 6. 产品超出保修期的；
 7. 发票或保修卡上记录的型号或编号与商品实物不符合的。
- 以上情况我公司将实施收费维修，费用类型包括维修费、零部件费，具体费用标准在相关部门允许范围内。
- 由代理商、经销商、零售商自行承诺的额外服务与附加的非原厂配置赠品，由原代理商、经销商、零售商负责服务。

⚠ 注意

1. 本产品只限于家用，非家用出现任何问题本公司概不负责。
2. 如您发现产品需要服务时，请直接联系当地特约服务网点或我司服务 热线400-8899-315。
3. 如来信，请留下您的联系电话，以便您能尽快得到回复。

WARRANTY INFORMATION

Midea appliance strictly comply with government policies .
Our company provide free maintenance service for the products operated under normal usage.

- The warranty period is two years for residential or home usage, three years for the motor, and six months for charging products and battery
- The warranty period (including main components) is six months for non residential or non home usage. It applies to, but not limited, business offices, commercial entities, cleaning companies fleet of appliance.
- During the warranty period, you will benefit from no cost home maintenance services (except for some special areas); the no cost maintenance is only applicable to the barrel products
- **Definition of the warranty period:**
 - (1) The date for issuing the valid warranty certificate should be taken as the starting date of the warranty period
 - (2) Without a valid warranty certificate, the first day after 6 months from the delivery date should be taken as the starting date of the warranty period
 - (3) If there is no valid warranty certificate, no packaging date, the first day after six months from market release should be taken as the starting date of the warranty period
 - (4) Date is defined as being 15 days after receiving the products; the warranty period will start from that date.
- **The manufacturer is responsible for replacing the components during the warranty period; Components replacement is the responsibility of the user beyond the warranty period;**
- **Other matters follow the government policies;**
- **The warranty does not apply to the following situations:**
 - (1) The appliance is damaged due to improper usage (including storage) and operation by the user.
 - (2) The appliance is damaged due to incorrect charge voltage utilization (below 187 V or above 240 V).
 - (3) The appliance is damaged due to failure of following procedures as described in this manual for maintenance, cleaning and usage.
 - (4) Disassembly, repair by people other than the company's specialized service personnel.
 - (5) Damages due to natural causes (such as lightning, fire, earthquake, floods and other natural disasters).
 - (6) The warranty period has expired.
 - (7) The product type or serial number noted on the invoice or warranty card is not in conformity with the actual product.
- **If any of the above written situations arise, the user will solely bear all the charges related to the maintenance including the cost of spare parts. The cost is defined according to standard charges.**
- **Any commitment for extra services, additional gifts made by original agents, distributors or retailers are their sole responsibility and the manufacturer cannot be held responsible or liable.**

⚠ Caution

1. This product is limited for home usage and the company is not responsible for any problems caused by other usage.
2. For service, please directly contact the local special service outlet or our service hotline 400-8899-315.
3. Please indicate your contact phone number or email for faster response.

保修卡

WARRANTY CARD

保修卡	维修记录
用户姓名	日期
电话	故障内容
通讯地址(邮编)	产品型号
购买商店	处理内容
维修点	维修单位名称
编号	电话
发票号码	维修员签名
购买时间	

Warranty card	Record of Maintenance
User name	Date
Tel	Problem description
Contact address (Post code)	Product model
	Detailed information
Purchase location name and address	Service technician name
	Tel
Service/maintenance supplier	Service technician signature
Serial No.	
Invoice No.	
Purchase date	

tips 修理时需出具发票 Original proof of purchase (store invoice) is required for any service request.

注意 Caution

1. 此保修卡在购买本公司产品时立即填写。
2. 此保修卡请妥善保存，购买者不必将卡寄回本公司。
3. 维修时请携带此证及有效发票正本。

1. This warranty card should be immediately filled after purchase.
2. Keep this warranty card for your records; it does not need to be returned to Midea.
3. Bring / provide the warranty card and original invoice for service requests.

产品参数

产品技术参数

型号	额定充电电压	额定频率	额定功率
U1	220 V ~	25.2 V ==	400 W

PRODUCT PARAMETERS

Product Technical Parameters

Model	Rated Charging Voltage	Rated Frequency	Rated Power
U1	220 V ~	25.2 V ==	400 W